G1345 Service Manual

Disassemble

	Take out the battery cover.
	Take out the battery.

	Use screw driver to take out the four Screws circled with red. (screw specification:+)
	Make a gap circled with yellow between front cover and back cover (case B), and then follow the arrow to separate back cover with front cover.

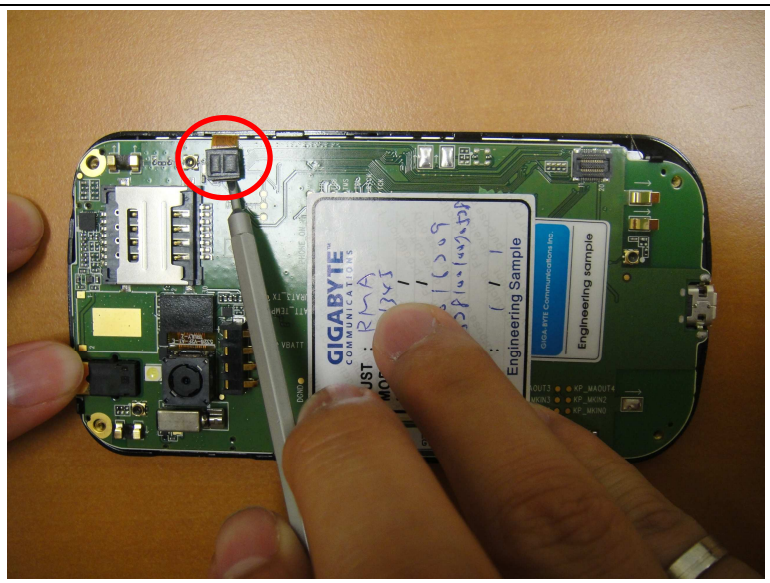	Take out the Touch Lens FPC connector circled with red.
	Separate the camera module connector circled with red.

	Separate the LCM connector circled with red.
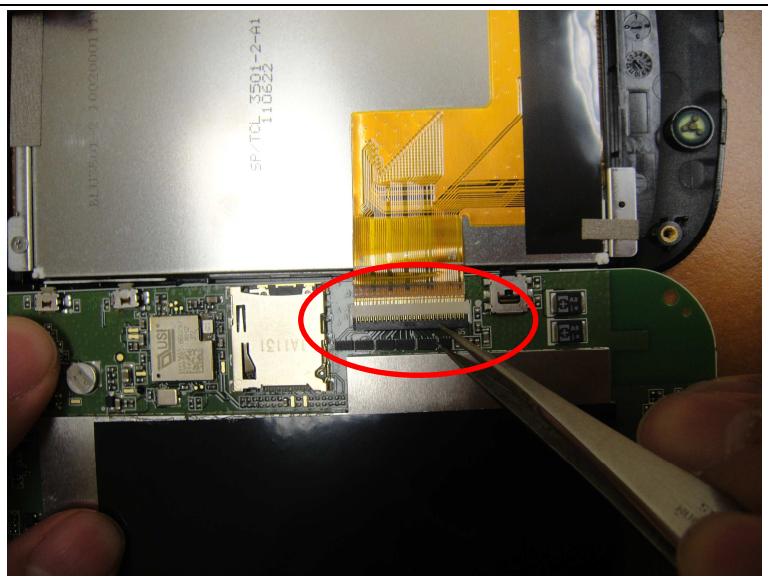	
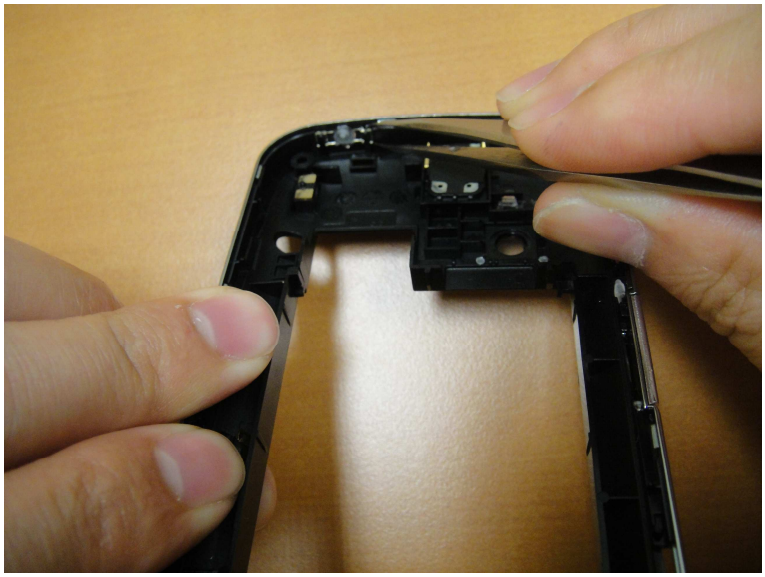	Take out the power key.

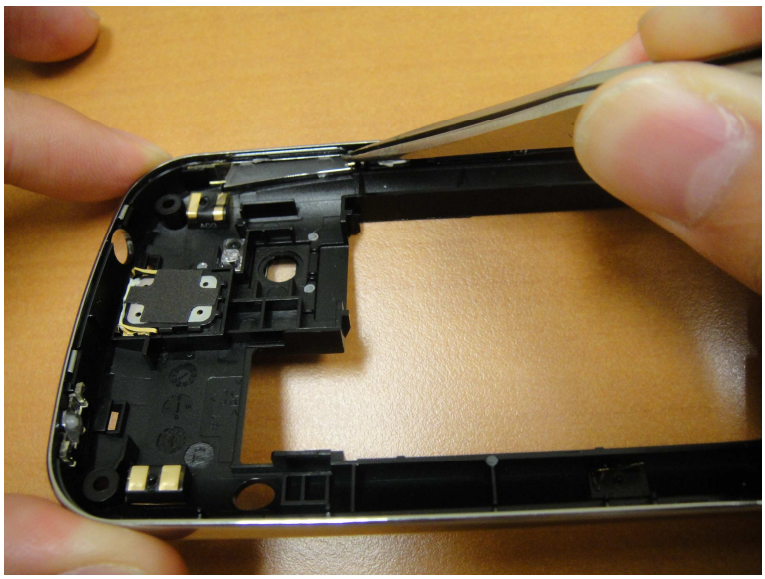	Take out the volume key.
	Take out the Camera Key.
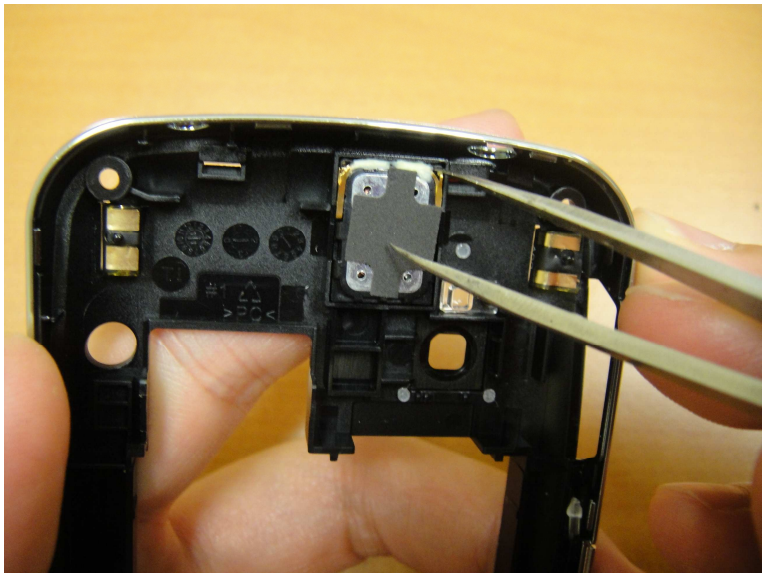	Take out the Speaker.

	Take out the Receiver
	Take out the Microphone.
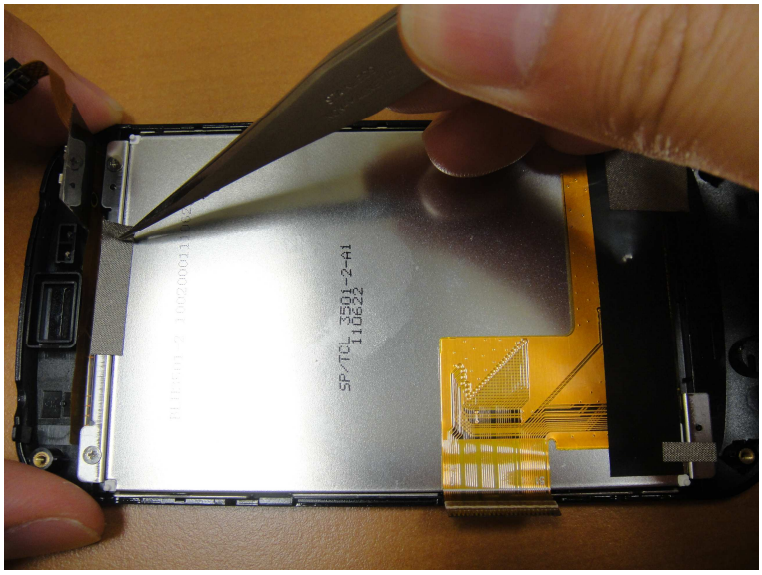	Take out the Mesh.

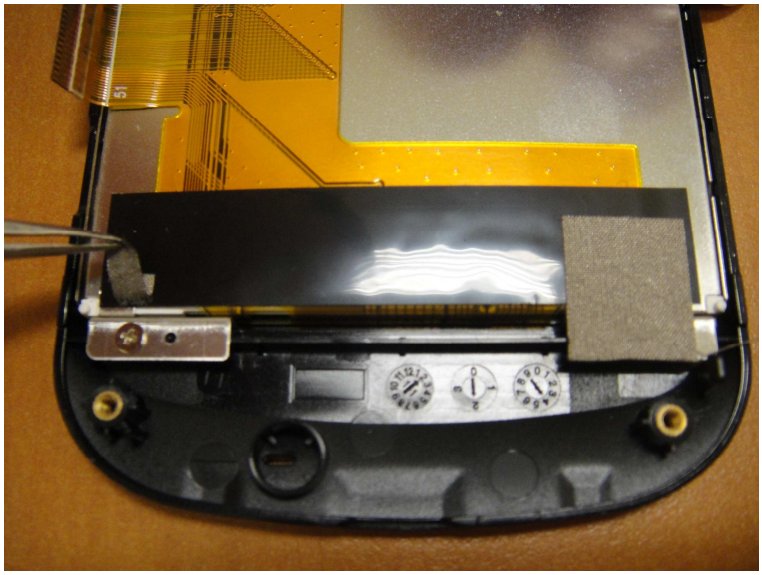	Take out the Mesh.
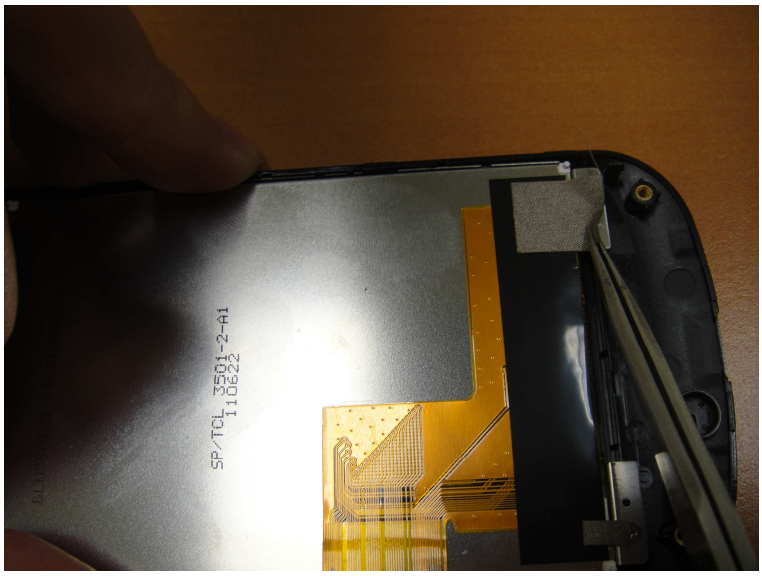	Take out the Mesh.
	Take out the LCM. (Notice: The LCD is attached to the touch panel with adhesive and is quite fragile, please be care of the dissembling.)

	DONE.